


Stand⁴

Dynaudio Contour S 1.4 / Confidence C1

Assembly instructions

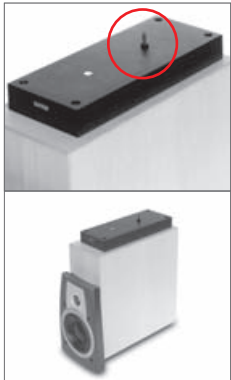

See step 1 to 3



See step 4



See step 5



See step 7 to 9



Confidence C1

The compact Contour and Confidence models are designed to offer exceptional performance while taking up minimal space. The Contour S 1.4 and the Confidence C1 are intended for use with the Dynaudio Stand⁴ and offer a direct connection to the stand's post via the included bolts. Acoustically this serves as a great advantage while offering the most elegant appearance.

Please take note of the instructions below in order to achieve a firm and solid assembly.

1. Ensure the drivers are protected with the original speaker grille.
2. Place the loudspeaker cabinet upside down on a clean, even surface. Normal floor carpeting is ideal and helps to avoid surface damage to the cabinet.
3. Screw the thread-end (as supplied with the loudspeakers) into the threaded holes of the cabinet's black plinth.
4. Screw one column onto the thread-end and tighten by hand.
5. Screw the second column onto the other thread-end and tighten by hand.
6. At this stage, the columns can optionally be filled with damping material (sand, etc.).
7. Place the three base plate layers on top of the columns and align the holes.
8. Using the Allen bolts supplied with the Stand⁴, attach the base plates to both columns.
9. Attach the spike-assembly to the four base plate nuts.
10. Carefully turn the completed assembly around and position on the floor. Please note that the combined stand/loudspeaker is now quite heavy and unevenly balanced, due to the cabinet weight. Ensure the spikes will not cause any damage.

The loudspeaker cabinet is now firmly attached to the Stand⁴.

We wish you many years of enjoyment listening to music!

Sales & Marketing

Dynaudio International GmbH, Ohepark 2, 21224 Rosengarten, Germany, Phone +49 - 4108 - 4180 - 0



Same instructions apply for Contour S 1.4